


GREEN KEEPER

GK-J1202

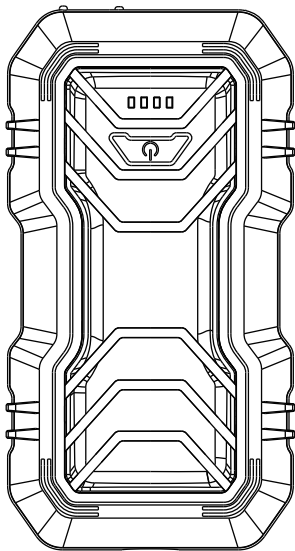


USER MANUAL

MULTIFUNCTIONAL JUMP STARTER

For more information and support visit:
www.greenkeeper.co/support

What's in the Box



Jump Starter X1



EC5 Jumper Cable X1




Protective Storage Bag X1



User Manual X1




Charging Cable X1



Cigarette lighter
adapter X1

Product Diagram

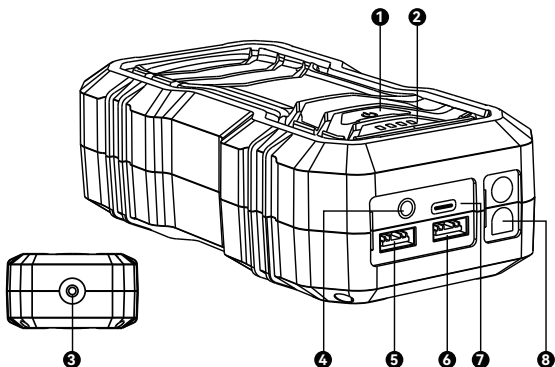

- 1 Power Button:** Press to turn the unit ON and OFF.
- 2 Battery/Charging Indicator:** Displays the battery level or the charging status.
- 3 LED Light:** This unit features three lighting modes: continuous light, strobe, and SOS. Press and hold on the power button for 3 seconds to toggle the light ON and OFF.
- 4 DC Output:** Supports 12V car devices.
- 5 USB1 Output:** Supports output options including 5V/3A, 9V/2A, and 12V/1.5A, with QC 3.0 protocol providing a maximum output power of 18W.
- 6 USB2 Output:** Supports 5V/2.1A output.
- 7 Type-C Input:** Supports a range of voltage/current inputs: 5V/3A, 9V/2A, and 12V/1.5A.
- 8 EC5 Output:** This port serves as the power interface for the jumper cable.

Technical Specifications

Internal Battery Type	Lithium polymer (LiPo)
Peak Current	2000A
Starting Current	1000A
Battery Capacity	3.7V/16000 mAh (59.2 Wh)
Operating Temperature	-4°F to +140°F (-20°C to +60°C)
Charging Temperature	32°F to +122°F (0°C to +50°C)
USB-C Protocol	QC3.0
USB-C (In)	5V/3A & 9V/2A & 12V/1.5A
USB-A Protocol	QC3.0
USB-A1(Out)	5V/3A & 9V/2A & 12V/1.5A
USB-A2 (Out)	5V/2.1A
DC5.5 Port (Out)	DC12V/6A max
Recharge Time	4.1 hours (with 18W charger rating)
Weight	1.5 kg (3.3 lbs)
LED Flashlight	80 Lumen
Product Dimensions	L170 x W90 x H51.6 mm L6.69 x W3.54 x H2.03 inches

Danger Warnings



Please read carefully and understand all safety information before using this product. Failure to follow these safety instructions may result in serious injury, property damage, or death.



Explosive Gas: Lithium battery / Lead-acid batteries can produce explosive gases during use.

Precaution: Check all warning labels on the product and engine, and follow all safety guidelines from the battery manufacturer and related equipment manufacturers. Operate the product in a well-ventilated area, and keep away from open flames, sparks, and smoking materials.



Explosion: Using incompatible, damaged, or unmonitored batteries with this product can lead to explosions.

Precaution: Ensure all connections are secure and correct. Do not leave the product unattended during use. Avoid using the product with damaged or frozen batteries and ensure compatibility with the recommended voltage, and follow the manufacturer's instructions carefully.



Fire: The product can emit heat during use or recharging as an electrical device. It can pose a fire risk and is capable of causing burns when overheated.

Precaution: Monitor the device during charging and keep it away from flammable materials. Keep the product uncovered during use. Avoid smoking or using open flames near the product.



Electrical Shock: This product is an electrical device that can cause severe injury through electrical shock.

Precaution: Handle all cables and connections with care. Do not expose the product to water or moisture.

Important Safety Information

Please read and understand all safety information before using this product. Failure to follow these safety instructions may result in serious injury, property damage, or death.

Operating Temperature: Operate the product within ambient temperatures of -20°C to 60°C . Do not operate outside these ranges. Keep it away from humid, hot, or flammable places.

Storage Conditions: Store in a dry location with a temperature range of -20°C to $+60^{\circ}\text{C}$, with a daily average of 0°C to $+25^{\circ}\text{C}$. Never exceed 80°C under any condition. Store in a dry place, away from damp conditions or corrosive materials.

Use Precaution: Use the product only as intended. Always wear eye protection and protective clothing when working near a battery. Do not handle or wear metal objects (e.g., tools, watches, jewelry), as they may spark or create a short circuit if accidentally dropped onto the battery. Keep clean water and soap nearby for battery acid contamination. Wash hands after handling batteries and related materials. Stop using immediately if you notice swelling, leakage, or an odor.

Starting Compatibility: This product is compatible only with 12-volt lead-acid batteries. Consult the battery manufacturer if unsure about the battery's specific chemistry or voltage before use.

Product Modifications: Do not alter, modify, or repair any part of the product. Disassembling the product may cause injury, death, or damage to property. Any modifications void the warranty.

Choking Hazard: This product should not be used by children. Accessories may present a choking hazard to children. Do not leave children unattended with the product or any accessory. The product is not a toy.

Minor Safety: The purchasing adult must provide detailed instructions and warnings if used by a minor. Failure to do so is the sole responsibility of the purchaser.

Force Start Function: Activating the force start function disables all safety features including spark-proof and reverse polarity protection. Do not reverse connect the clamps. Do not short-circuit the jump starter by connecting the red and black clamps directly. Handle with extreme caution, as it may cause sparks or damage if misoperated, which may result in serious injury, property damage, or death.

Battery Disposal: The built-in lithium-ion battery should only be replaced by the manufacturer and must be recycled or disposed of separately from household waste. Do not attempt to replace the battery yourself. Always take used batteries to a local battery recycling center.

How To Recharge The Jump Starter?


The battery level is indicated by the Charge LEDs, with each LED representing 25% of the battery's level. When fully charged, all four blue LEDs will be solid.



25% 50% 75% 100%



Recharge With The Provided Charging Cable

1. Connect the jump starter to the provided Type-C cable.
2. Connect to a USB port to start recharging.

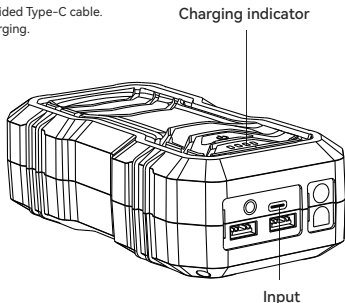

Recharge With An USB AC Adapter


1. Connect the jump starter to the provided Type-C cable.
2. Connect the Type-C cable to an USB AC adapter.
3. Plug the AC adapter into a power source to start recharging.

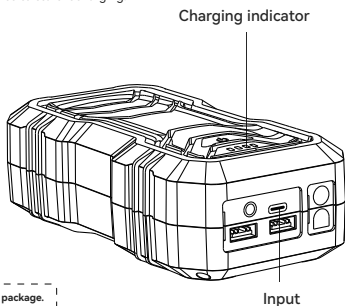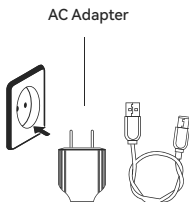


Note: USB AC adapter is not included in the package.

Recharge With A Car Charger

1. Connect the jump starter to a Type-C car charger.
2. Plug the car charger into a power source to start recharging.

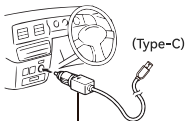

Cigarette Lighter Adapter

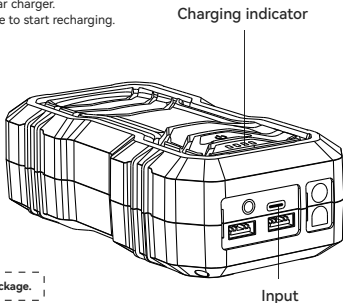


Note: Car charger is not included in the package.

How To Jump Start Your Vehicle?

The GK-J1202 jump starter is specifically designed for jump starting 12V lead-acid batteries in gasoline engines up to 5.0L and diesel engines up to 3.5L. Do not attempt to jump start vehicles with a higher battery voltage, different voltage, or higher displacement. Suitable for vehicles, including cars, trucks, boats, buses, SUV, RV, lawn mowers, motorcycles, and more.

Before operating, ensure that your jump starter has battery level above 30%.
Recharge the unit if battery level is below 30%.

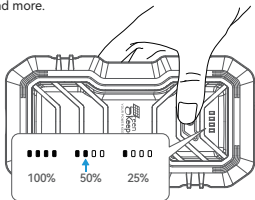

Important Notes

This jump starter is designed to jump start 12V lead-acid battery ONLY, and is not suitable for other types of battery.

It is recommended to allow the jump starter to cooldown before the next attempt after 3 failures in a row. After jump-starting your vehicle, promptly disconnect the jump starter from the engine to prevent any issues. Be cautious to avoid reverse charging in case of accidental misuse.

The jump starter will automatically enter sleep mode after 30 seconds of inactivity. Reactivate it by pressing the power button.

Recharge the jump starter at least once every 3 months to maintain battery health.

Smart Battery Clamps Instructions

The smart battery clamps are equipped with 10 safety features to safeguard against damage caused by misoperation or incorrect connections.



Over Charge Protection



Over Current Protection



Short Circuit Protection



Reverse Polarity Protection



Low Temp Protection



High Temp Protection



Over Voltage Protection



Over Load Protection



Reverse Charge Protection




Spark Proof Protection


Indication	Status / Instruction
Blue Light	Stand by mode. / When plug the jumper cable into the EC5 port, the BLUE light will illuminate.
Green Light	Ready to jump start mode. / When the battery clamps are correctly connected to the vehicle battery terminals (normal start mode), or when the force start function is activated (normal start mode), the GREEN light will illuminate.
Force Start Button	Force jump starting mode. / When press and hold for 3 seconds on the force start button (the red button on the side of the battery clamps), safety features will be disabled when using the force start mode.

Normal Start Mode


Follow these step-by-step instructions. Ensure to follow these steps precisely to safely and effectively jump start your vehicle.

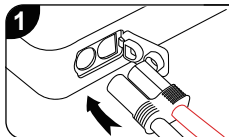


Insert the battery clamps into the EC5 port on the jump starter.

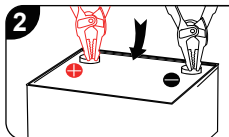

Connect the battery clamps securely and correctly to the vehicle battery terminals.

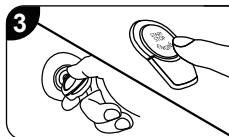

Start the engine within 30 seconds after the indicator light turns green.

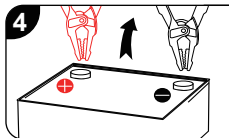


Promptly disconnect the battery clamps from the vehicle battery after jump starting.


Notes: If in step 2 the green light does not activate, your vehicle battery is likely to have low voltage (<2V), consider using the force start mode. Inspect your vehicle for other potential reasons for failure to start.

Force Start Mode


Use the force start function to jump start low voltage vehicle batteries (<2 volts). Activate this mode by pressing the red button located on the side of the battery clamps.




Insert the battery clamps into the EC5 port on the jump starter.




Connect the battery clamps securely and correctly to the vehicle battery terminals.



Press and hold the red button for 3 seconds until the indicator light turns green.



Start the engine within 30 seconds after the indicator light turns green.





Promptly disconnect the battery clamps from the vehicle battery after jump starting.

Caution: Use this mode with extreme caution. Activating it disables all safety features, including spark-proof and reverse polarity protection. Avoid allowing positive and negative battery clamps to touch or connect, as this may generate sparks. Ensure that the battery clamps are securely and correctly connected to the corresponding poles to prevent damage.

How To Use LED-Lights ?

The GK-J1202 jump starter features 3 modes of emergency LED lights: flashlight, SOS, and strobe. Press and hold the Power button for 3 seconds to activate the lights. Short press the ON/OFF button to cycle through the different lighting modes.

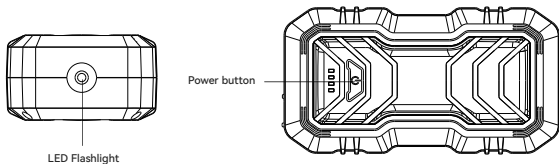


How To Charge Devices ?

Use it as a power bank for your devices. The GK-J1202 jump starter offers two USB output outputting no more than 18W power for charging devices.



Plug the charging cable to either of the USB output port.




Connect the product to your device.




Press the power button to start charging your phone, tablet, and more.

How To Use The 12V DC Output?

Connect the 12V car devices to the jump starter using the provided cigarette lighter adapter. It supports 12V DC devices such as car pressure washers, vacuums, inverters, and more up to 6A output current.

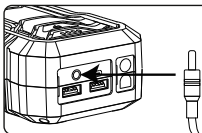

Step 1. Connect the the provided cigarette lighter adapter to the jump starter.

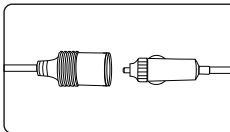




Step 2. Connect the 12V device to the cigarette lighter adapter.



Step 3. Press the power button to start using it as a power source.

Troubleshooting

Smart Battery Clamps Abnormal Error Troubleshooting

Error	Indication	Reason / Solution
 Low Battery	LB Red Light is On.	Battery level is low. / Recharge the product.
 Reverse Connection	RC Red Light is On.	Battery clamps are connected in reverse. / Reverse the battery clamps connections.
 High Temperature	HT Red Light is On.	Product is overheated. / Wait for the product to cool down before recharging or discharging.

Other Error Troubleshooting

Error	Indication	Reason / Solution
Short Circuit	Blue Light Does Not Turn Green.	If the green light does not activate and you cannot jump start at all, a short circuit may have occurred due to misoperation. To identify a short circuit, try activating the force start mode. If the force start mode cannot be activated, it confirms a short circuit. Remove all loads and try again, ensuring the clamps are connected to the correct battery terminals: red to positive (POS, P, +) and black to negative (NEG, N, -).
Cable Defect	Light Does Not Come On.	Cables may be loose, parts damaged during use, or affected by other factors. / Check the battery level and recharge if needed, or contact customer support for further assistance.
Product Defect	Light Does Not Come On.	Product parts may be loose, damaged during use, or affected by other factors. / Check the battery level and recharge if needed, or contact customer support for further assistance.
Battery Defect	Charge LEDs Do Not Come On or Blink Abnormally.	There may be issues with the charger, charging cable, battery cells, or other factors. / Inspect cable health and connections, or contact customer support for further assistance.

Warranty

Warranty Card

MODEL NO.:		SERIAL NO.:	
DEALER'S NAME:			
CUSTOMER'S NAME:			
CUSTOMER'S E-MAIL:			
DATE OF PURCHASE:			
RMA NUMBER:			
PLEASE KEEP YOUR RECEIPT TO VERIFY YOUR WARRANTY.			

Green Keeper 12 Months Warranty Card.

Green Keeper warrants that this product (the "Product") will be free from defects in material and workmanship for a period of 12 months from the date of purchase (the "Warranty Period"). For defects reported during the Warranty Period, Green Keeper will, at its discretion, and subject to Green Keeper's technical support analysis, either repair or replace defective Products. Replacement parts and products will be new or serviceably used, comparable in function and performance to the original part and warranted for the remainder of the original Warranty Period.

Note: Green Keeper's liability is limited to replacement or repair. To the fullest extent permitted by law, Green Keeper is not liable for any special, indirect, consequential, or exemplary damages, including lost profits, property damage, or personal injury related to the product, even if aware of the possibility of such damages. These warranties replace all other warranties, including implied warranties of merchantability and fitness for a particular purpose. If any laws impose warranties that cannot be excluded, this limitation applies to the maximum extent allowed.

This Warranty Card is made solely for the benefit of the original purchaser of the Product from Green Keeper or from a Green Keeper approved reseller or distributor and is not assignable or transferable. To assert a warranty claim, the purchaser must: (1) request and obtain a return merchandise authorization ("RMA") number and return location information (the "Return Location") from Green Keeper Support by emailing support@greenkeeper.co; and (2) send the Product, including RMA number, warranty card, receipt or a warranty fee (fee required only if not providing receipt) of 40% of MSRP of the defective Product (the "Warranty Fee") [RMA will include applicable Warranty Fee amount] to the Return Location. DO NOT SEND IN PRODUCT WITHOUT FIRST OBTAINING AN RMA FROM GREEN KEEPER SUPPORT.

Note: The original purchaser is responsible for prepaying all packaging and transportation costs to ship products for warranty service.

NOTWITHSTANDING THE ABOVE, THIS WARRANTY CARD IS VOID AND DOES NOT APPLY

TO PRODUCTS THAT: (a) are misused, mishandled, subjected to abuse or careless handling, accident, improperly stored, or operated under conditions of extreme voltage, temperature, shock, or vibration beyond Green Keeper's recommendations for safe and effective use; (b) improperly installed, operated or maintained; (c) are/were modified without the express written consent of Green Keeper; (d) have been disassembled, altered or repaired by anyone other than Green Keeper; (e) the defects of which were reported after the Warranty Period. **THIS WARRANTY CARD DOES NOT COVER:** (1) normal wear and tear; (2) cosmetic damage that does not affect functionality; or (3) Products where the Green Keeper serial number is missing, altered, or defaced.

If you have any questions regarding your warranty or product, contact Green Keeper Support (support@greenkeeper.co) or write to: The Chl Industries Co., Limited, At Room 1205, 12/F, Tai Sang Bank Building, 130-132 Des Voeux Road, Central, Hong Kong.

GREEN KEEPER

MULTIFUNCTIONAL JUMP STARTER



Made in P.R.C.